

Technical Data Sheet

Pressure / Temperature / Humidity / Air Velocity / Airflow / Sound level

CO₂ transmitter


CO 112

KEY POINTS

- Range from 0 to 5000 ppm
- 0-10 V active output, power supply 24 Vac/Vdc (3-4 wires)
- ABS V0 housing, IP65 (depending on model), with or without display
- "1/4 turn" system mounting with wall-mount plate
- Housing with simplified mounting system



FEATURES OF HOUSING

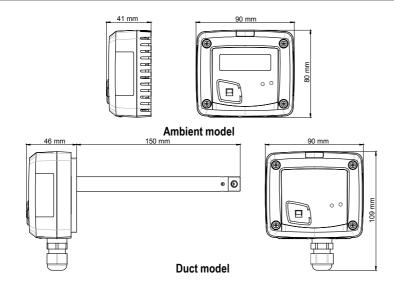

Material: ABS V0

Protection:

- duct model: IP65 - ambient model: IP20

Display: LCD 10 digits. Size: 50 x 17 mm

Height of digits: Value: 10 mm; Unit: 5 mm

Cable gland (only for duct model): for cables

Ø8 mm maximum

Weight: 138 g (ambient model); 150 g (duct model)

TECHNICAL FEATURES

Unit of measurement	ррт	
Measuring range	From 0 to 5000 ppm	
Accuracy*	±3 of reading ±50 ppm	
Type of sensor	Infrared sensor	
Response time	T63 = 30 s	
Resolution	1 ppm	
Type of fluid	Air and neutral gas	
Conditions of use (°C/%RH/m)	From 0 to +50°C. In non-condensing condition. From 0 to 2000 m.	
Storage temperature	From -10 to +70°C	

^{*}All the accuracies indicated in this technical datasheet were stated in laboratory conditions, and can be guaranteed for measurements carried out in the same conditions, or carried out with calibration compensation

PART NUMBER

Example: CO112-POA


CO₂ transmitter, 4-20 mA active transmitter, with display and duct probe

Important note:

The duct model is available only without display.

TECHNICAL SPECIFICATIONS - active 0-10 V or 4-20 mA (power supply 24 Vac/Vdc ±10%), 3-4 wires - common mode voltage <30 VAC Output / Power supply maximum load: 500 Ohms (4-20 mA) / minimum load: 1 K Ohms (0-10 V) 3 VA (0-10 V) or 3 VA (4-20 mA) Consumption 2014/30/EU EMC; 2014/35/EU Low Voltage; 2011/65/EU RoHS II; 2012/19/EU WEEE **European directives** Screw terminal block for cables from 0.05 to 2.5 mm² or from 30 to 14 AWG **Electrical connection** Carried out according to the code of good practice Communication to PC USB-mini DIN cable **Environment** Air and neutral gas

CONNECTIONS

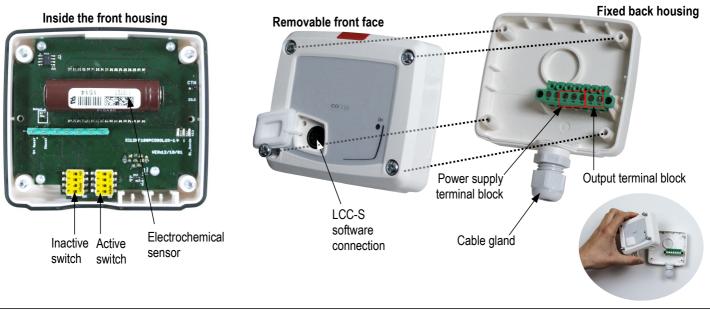



ELECTRICAL CONNECTIONS - as per NFC15-100 standard




This connection must be made by a qualified and trained technician. To make the connection, the transmitter must not be energized.

Active, 4 wires :

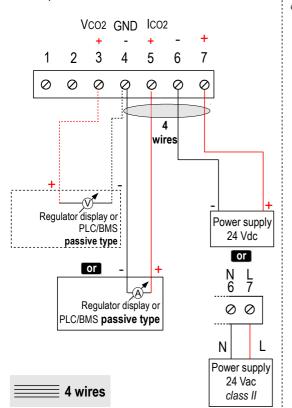



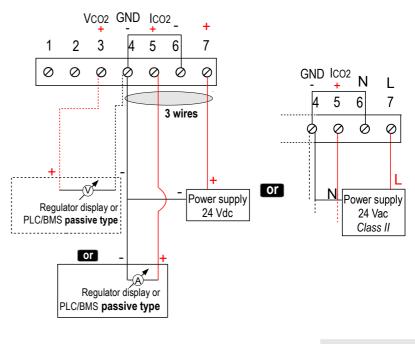

3 wires


SETTINGS AND USE OF THE TRANSMITTER

> Configuration



To configure the transmitter, it must not be energized. Then you can make the required settings thanks to the DIP switches as shown on the drawing below. When the transmitter is configured, you can power it up.

To configure the transmitter, unscrew the 4 screws of the housing then open it. DIP switches allowing the different settings are accessible.

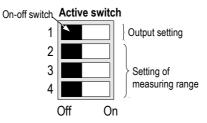

Measuring range setting

To set a measuring range, put the on-off switches 2, 3 and 4 as shown below:

Measuring ranges	Configuration via PC (from 0 to 5000 ppm by default)	From 0 to 1000 ppm	From 0 to 2000 ppm
Combinations	1 2 3 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	1 2 3 4	1 2 3

> Output setting - active switch

To set the type of analogue output, please put the on-off switch of the output as shown beside.

Configurations	4-20 mA	0-10 V
Combinations	1 2 3 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	1

CONFIGURATION VIA LCC-S SOFTWARE (optional)

An easy and friendly configuration with the software!

It is possible to configure intermediary ranges.

Caution: the minimum difference between the minimum scale and the maximum scale is 20.

Example: for a 0-5000 ppm transmitter, the minimum delta is 20 ppm. So the transmitter could be configure from 0 to 70 ppm from 0 to 20 ppm.

- To access to the configuration via software:
 - Set the switch as shown beside.
 - Connect the cable of the LCC-S to the connection of the transmitter.
- To configure the transmitter, please refer to the LCC-S user manual.

Caution: The configuration of the parameters can be done either by DIP switch, or by software (you cannot combine both solutions).


MOUNTING


To mount the transmitter, mount the ABS plate on the wall (drilling: Ø6 mm, screws and pins are supplied).

Insert the transmitter on the fixing plate (see A on the drawing beside). Rotate the housing in clockwise direction until you hear a "click" which confirms that the transmitter is correctly installed.



Ambient model has not any fixing plate.
4 fixing holes are inside the back housing.
Use them to install the transmitter on the required location.

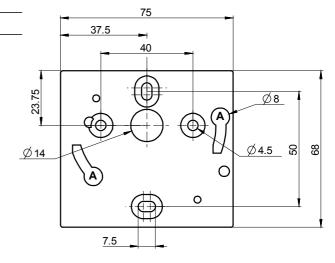




POSITIONING OF THE PROBE

For duct models, the positioning of the probe is important to get accurate measurements: the hole located next to the screw at the end of the probe must face the air flow.

Procedure to modify the positioning of the end of the probe:

- > Unscrew the screw.
- > Turn the end of the probe: the hole must face the air flow.
- > Replace the screw.

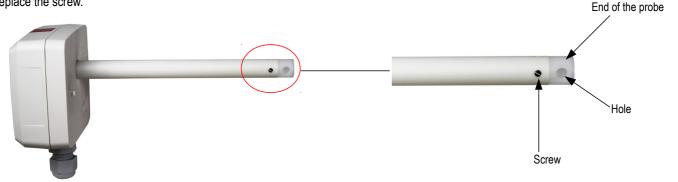

MAINTENANCE

Please avoid any aggressive solvent. Please protect the transmitter and its probes from any cleaning product containing formol, that may be used for cleaning rooms or ducts.

OPTIONS AND ACCESSORIES

- KIAL-100A: Power supply class 2, 230 Vac input, 24 Vac output
- KIAL-100C: Power supply class2, 230 Vac input, 24 Vdc output
- LCC-S: configuration software with USB cable



Only the accessories supplied with the device must be used.

PRECAUTIONS FOR USE

Please always use the device in accordance with its intended use and within parameters described in the technical features in order not to compromise the protection ensured by the device.



Once returned to KIMO, required waste collection will be assured in the respect of the environment in accordance with European guidelines relating to WEEE.

www.kimo.fr

Distributed by:



e-mail: export@kimo.fr